


3-1. Using the air conditioning system and defogger

Automatic air conditioning control

Airflow and outlets automatically adjust according to the temperature setting.

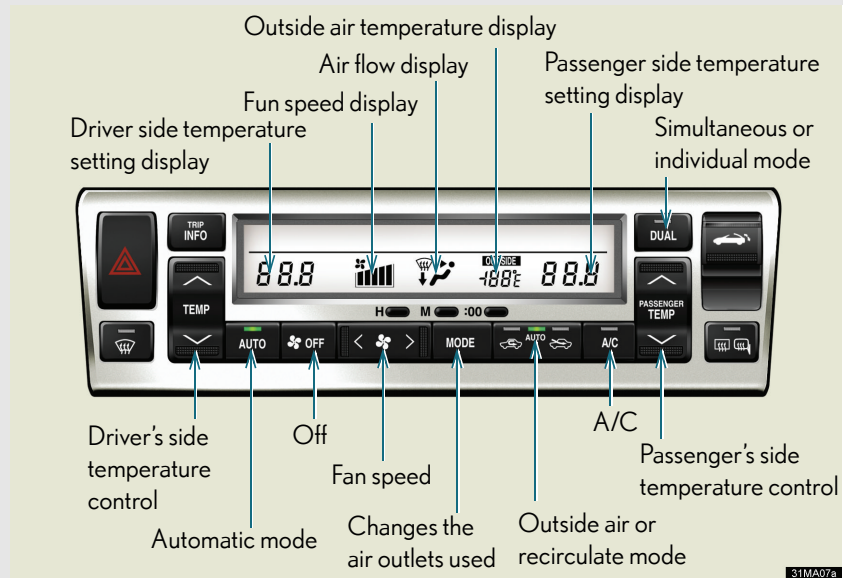

Using the automatic mode

STEP 1 Push  .

➡ The air conditioning system will begin to operate. Air outlets and fan speed are automatically adjusted according to the temperature setting.

STEP 2 Adjust the temperature setting using  .

The temperature for the driver and passenger seats can be set separately. (→P.157)


Adjusting the settings


■ Adjusting the temperature setting

Press .

Use .

Press “^” to increase the temperature and “v” to decrease the temperature on the driver and passenger side controls.


Press  once more to set the driver and passenger side temperatures to the same setting (Combined mode).

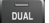The air conditioning system switches between simultaneous and individual modes each time  is pressed.

■ Adjusting the fan speed

Push < (decrease) or > (increase) on the  button.


Fan speed can be set to one of five different speeds.

Push  to turn the air conditioning system off.

■ Defogging the front windshield

STEP 1 Push .

➡ The fan and automatic air conditioning control operate simultaneously.


STEP 2 Adjust the air intake mode to  (outside) air mode using

.

The automatic air conditioning control switches to outside air mode when the outside temperature is low.


3-1. Using the air conditioning system and defogger

■ Changing the air flow

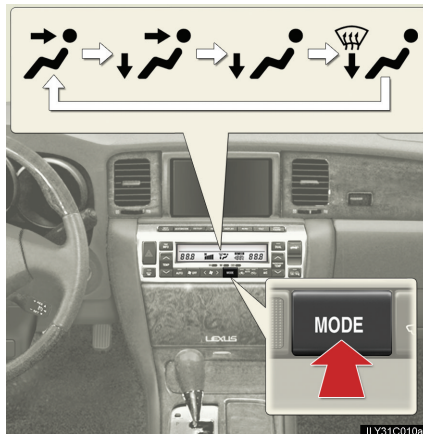

Push **MODE**.

The following modes are selected each time the button is pushed.

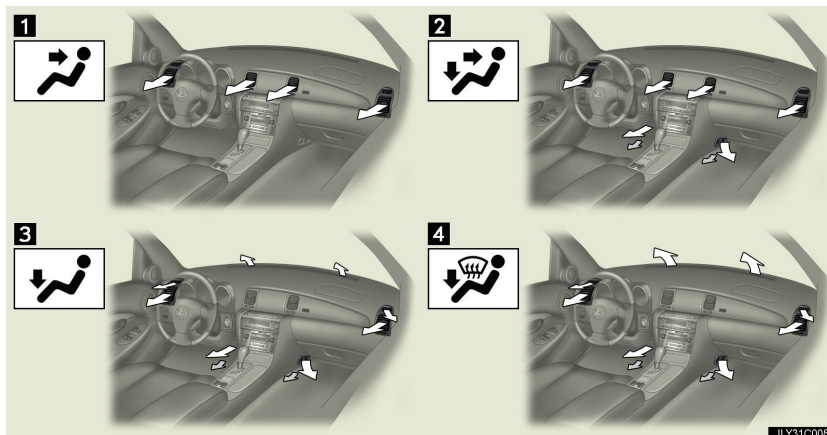

- 1 Air flows to the upper body.
 - 2 Air flows to the upper body and feet.
 - 3 Air flows to the feet.
 - 4 Air flows to the feet and the windshield defogger operates.
- ⇒ Air flows from the lap-jet vents only when the retractable hardtop is opened.

3-1. Using the air conditioning system and defogger


■ Switching between recirculated air and outside air modes

Push .

Pushing the button changes between recirculated (recycles air inside the vehicle), AUTO and outside air modes (introduces air from outside the vehicle).

■ Adjusting the position of and opening and closing the air outlets

► Center, and side air vents

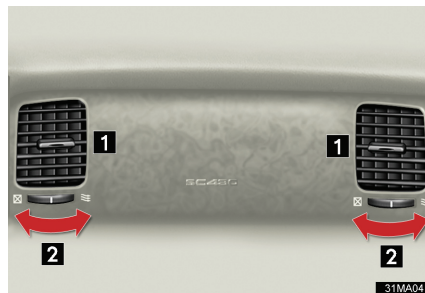

- 1 Direct air flow to the left or right.
- 2 Turn knob right to open the vent and left to close the vent.

3

Interior features

■ Operating the automatic air conditioning control in automatic mode

Fan speed is automatically adjusted according to the temperature setting and operating conditions. As a result, the following situations may occur.

The fan may stop for a short period immediately after operation.

■ Using the system in recirculated mode


The windows will fog up more easily, if recirculated mode is used for an extended period.

■ Switching between outside air and recirculated air modes

Recirculated air modes or outside air modes may be automatically switched to in accordance with the temperature setting and the inside temperature.

3-1. Using the air conditioning system and defogger


■ Outside air temperature approaches 32°F (0°C).

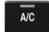The air conditioning system will not operate even if  button is pushed.

■ Lap-jet vents

Air flows only when the retractable hardtop is opened.

■ When the indicator light on switch flashes

Press  and turn off the air conditioning control system before turning it on once more. There may be a problem in the air conditioning control system, if the indicator light continues to flash. Turn the air conditioning control system off and have it inspected by your Lexus dealer.

■ Notes regarding outside temperature display

In the following situations, the correct outside temperature may not be displayed, or the display may take longer than normal to change.

- When stopped, or driving at low speeds (less than 12 mph [20 km/h])
- When the outside temperature has changed suddenly (at the entrance/exit of a garage, tunnel, etc.)
- When it is extremely hot or cold outside the vehicle


■ Air conditioning odors

- During use, various odors from inside and outside the vehicle may enter into and accumulate in the air conditioning system. This may then cause odor to be emitted from the vents.
- To reduce potential odors from occurring:
 - It is recommended that the air conditioning system be set to outside air mode prior to turning the vehicle off.
 - The start timing of the blower may be delayed for a short period of time immediately after the air conditioning system is started in automatic mode.

3-1. Using the air conditioning system and defogger

CAUTION

■ To prevent the windshield fogging up

Do not use  during cooled air operation in extremely humid weather. The difference between the temperature of the outside air and that of the windshield could cause the outer surface of the windshield to fog up, blocking your vision.

NOTICE

■ To prevent battery discharge

Do not leave the automatic climate control on longer than necessary when the engine is stopped.


3

Interior features

3-1. Using the air conditioning system and defogger

Rear window defogger

Use the rear window defogger when the rear window becomes clouded with condensation.

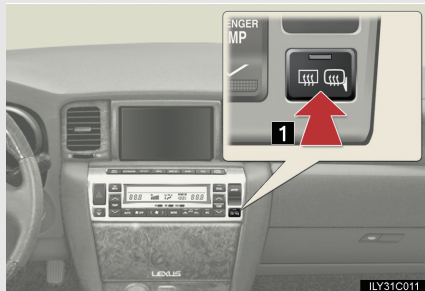

1 ON/OFF

Push the button to turn the rear window defogger on. The defogger will automatically turn off after approximately 15 minutes or if you push the button again.

■ Outside rear view mirror heaters

Pressing the rear window defogger button also turns the mirror heaters on.

! CAUTION

■ When the defogger is on

Do not touch the rear view mirror surfaces, as the surfaces can become very hot and burn you.